

This document is adapted to the following products:

Part NO.	Introductions
RAK5270	– SoftAP mode, Default IP : 192.168.100.1
RAK5206	– Connected to Router, Follow below these steps to get IP Address .
Flylink AV – RAK553 (TX) + RAK554 (RX)	RX: Default IP : 192.168.100.1 TX: Follow below these steps to get IP Address .
Flylink HD – RAK566 (TX) + RAK554 (RX)	
Flylink HD PLUS – RAK566 (TX) + RAK567 (RX)	

Android APP: <https://www.pgyer.com/camsight>

IOS APP : Search in APPLE STORE with **camsight sport** and install.

Support Center:

supporten.rakwireless.com/

Website:

www.rakwireless.com

APP SDK Source code(rakvideo):

www.github.com/rakwireless

Note: Please make sure your smartphone supporting 5G WIFI!

1, Firstly, power on the receiver and transmitter and waiting the blue LED light more than 10s. Open your smartphone' s WIFI setting and connect the receiver' s SOFTAP name (FS_5G_AP_xxxxxx or Flylink_xxxxxx) .



2, Please make sure your transmitter' s blue LED lighting more than 10s. Open camsight ,and click the play icon in the bottom-right corner. Then you can play the video now .



3, This product will show the transmitter' s IP address when you play the video .Camsight can record or take photo in local time . and within 3 seconds, APP show the TX IP address .

